


Carton Assembly Instructions

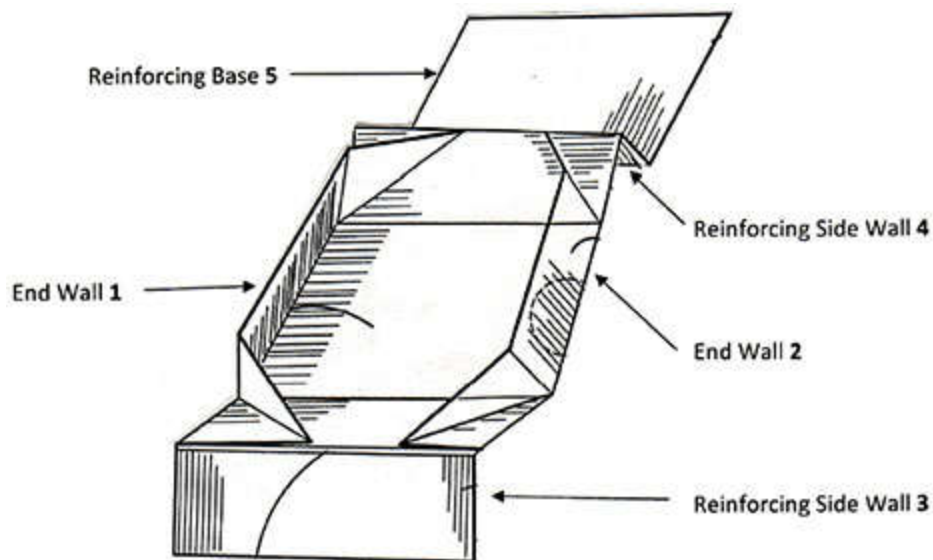

- Step 1: Lift "End Wall 1 & 2" until Vertical
- Step 2: Lift and Tuck In "Reinforcing Side Wall 3"
- Step 3: Lift "Reinforcing Side Wall 4"
- Step 4: Tuck In "Reinforcing Base 5" to LOCK in the completed construct.

NOTES FOR OPTIMAL INTEGRITY

1. Environment Temperature: -5°C to +5°C
2. Blades: Avoid use of blades that may slice through outer surface
3. Lid / Packaging Tape: Securely fitted onto Base and sealed with 50mm (W) x 50um (Th) tape
4. Packaging Tape: Tape applied to circumference of Base at @ MID HEIGHT point.

